



3 PHASE OIL CRACKER INSTRUCTIONS

1. Open the road case undoing the 2 session clips on the side.
2. Remove 3 phase lead found in bottom right hand corner and plug into external 3 phase plug found on bottom right of machine.
3. Plug into studio power supply and turn 3 phase **ON/OFF** switch on bottom right of machine (positioned directly above lead just plugged in) to **ON** position.
4. Inside the road case, (top left) is a small orange box, which will now have either a **red light** or a **green light** illuminated.

If **green** proceed to step 5, if **red**, switch phasing switch adjacent to the orange box, to the opposite direction.

This protection procedure is necessary, due to the inconsistent wiring found in studios and locations across the country.

5. The fogger can now be started, using the **red/ green ON-OFF** buttons on the top of the machine. (Red button has a twist to lock function)
6. For best results and dispersal of fog a fan should be placed approx. 2 metres behind the roadcase and at about head height.
7. If any of the fogging jets become fouled, they can be cleaned using the manual-cleaning button found on the back of the jets, inside the road case.
8. Fuel used in the 3 phase Oil Cracker should be that supplied by Texas Productions only - the Texas Productions office on request can supply a material safety data sheet.



NB. It is a condition of hire that all persons hiring this machine do so at their own risk. Texas Productions Pty Limited, The Hell Team and their employees are absolved from liability for damage to the hirer and associated production personnel, property and equipment, no matter whether for negligence or any other basis and no matter whether such injury or damage be foreseeable or howsoever such injury or damage be caused. Any damage to the machine and subsequent loss of income, is payable in full by the hirer.