



DF-50 DIFFUSION FOGGER

1. Please transport the machine upright at all times to avoid fuel spillage from machine.
2. Plug 240v lead supplied into 3 pin socket at rear of machine, then plug into 240v power supply. Turn on power supply.
3. Turn red rocker switch on rear of machine to "on" position et voila! you have diffusion instantly.
4. Only use Diffusion fluid supplied by Texas Productions.
5. MSDS sheets for fluid available through Texas Productions office.

NB. It is a condition of hire that all persons hiring this machine do so at their own risk. Texas Productions Pty Limited, The Hell Team and their employees are absolved from liability for damage to the hirer and associated production personnel, property and equipment, no matter whether for negligence or any other basis and no matter whether such injury or damage be foreseeable or howsoever such injury or damage be caused. Any damage to the machine and subsequent loss of income, is payable in full by the hirer.

Phone 02.8925.7000 for assistance.
AH: 0418.415.129